




Lite FX Rotating Big Ball of Lite Model 1929 Back Panel Removal

This guide will show you how to remove the back panel of the Lite FX Rotating Big Ball of Lite Model 1929. This is required for all fixes except the power switch.

Written By: Nick Kaprielian

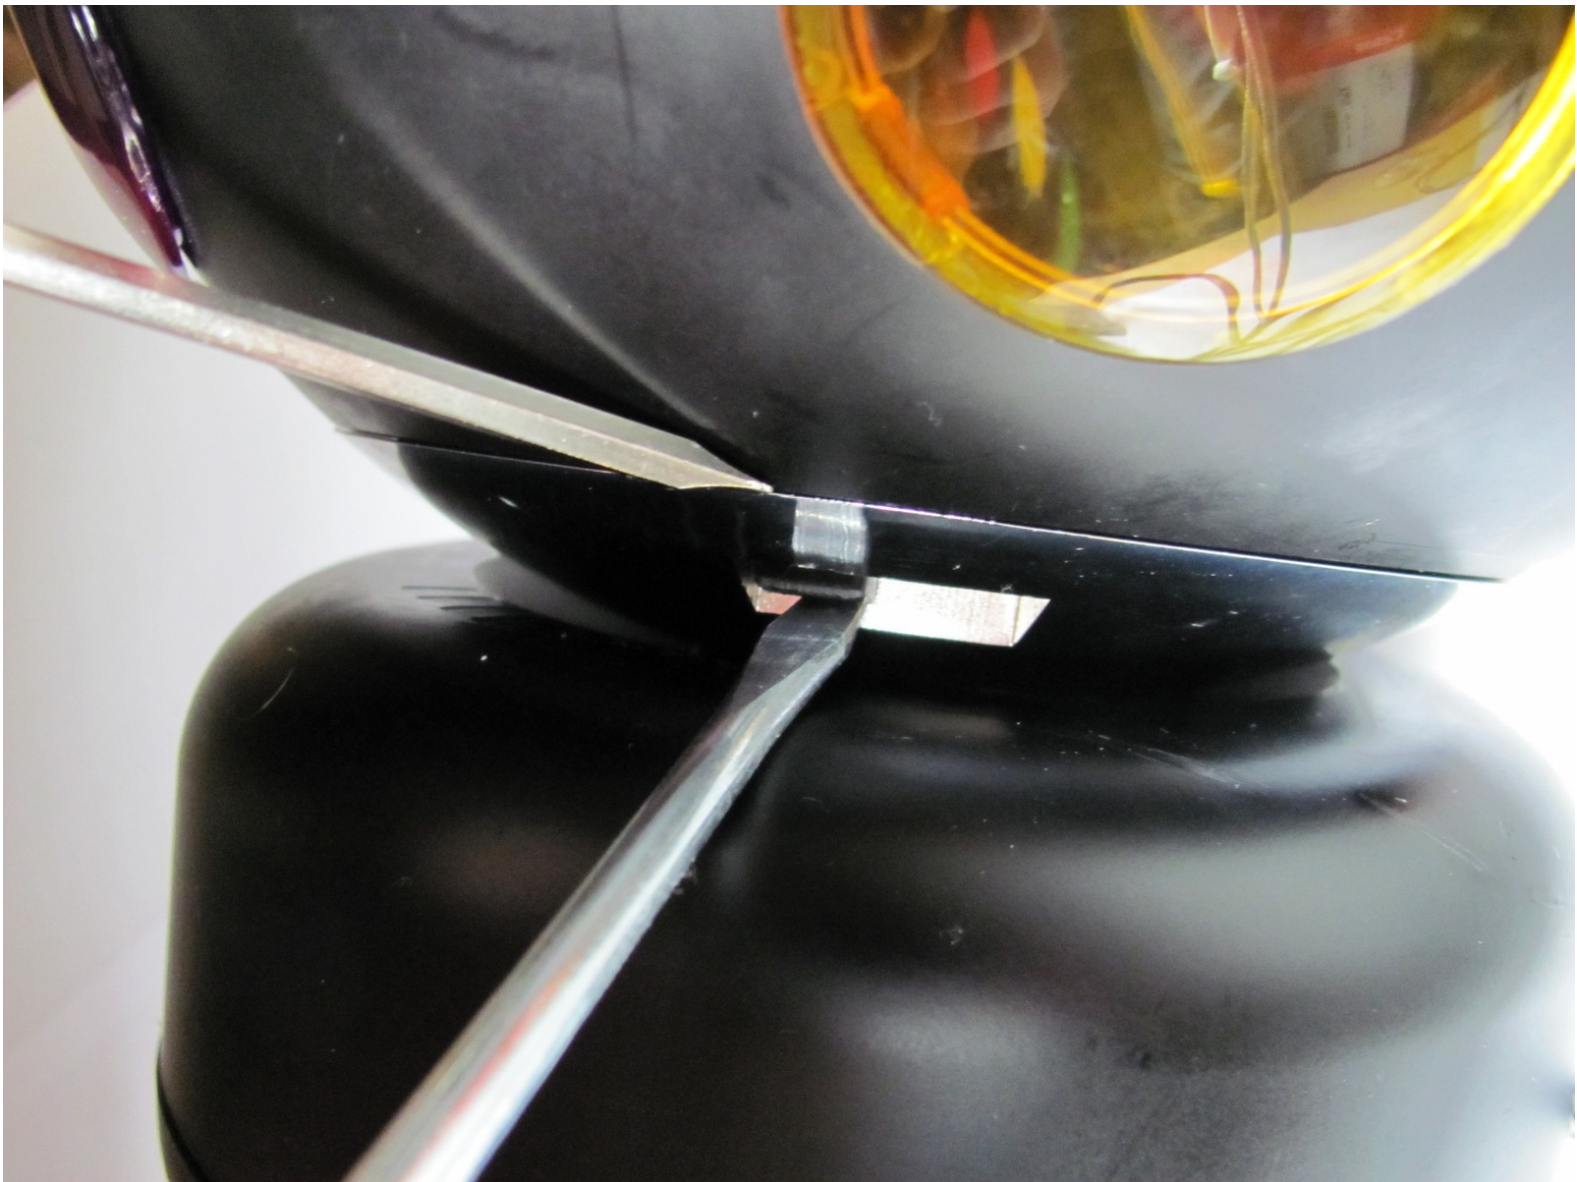

INTRODUCTION

If you just can't find out what is wrong with your disco ball, you will probably need to open it to troubleshoot it. This guide will walk you through the steps to do that.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Base



- Turn the device over, so that the base is on top.

Step 2



- Peel off the piece of metal that is glued to hold the two halves of the base together.
- ☑ You may need rubber cement to reapply the piece of metal when reassembling the device.

Step 3



- Unscrew the four 10mm phillips head screws on the bottom of the device.

i Once the base is removed, the device should look as shown in the picture.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 12:41:24 AM.